

## SERVICE INSTRUCTIONS

1. Do NOT attempt to repair or adjust any electrical or mechanical functions on this unit. Doing so will void the Warranty.
2. If you need to exchange the unit, please return it in its original carton, with a sales receipt, to the store where you purchased it. If you are returning the unit more than 30 days after the date of purchase, please see the enclosed Warranty.
3. If you have any questions or comments regarding this unit's operation or believe any repair is necessary, please call our Consumer Service Department at 1-800-557-4825 or visit our website at [www.rivalproducts.com](http://www.rivalproducts.com)

### 1-YEAR LIMITED WARRANTY

Sunbeam Products, Inc. doing business as Jarden Consumer Solutions or if in Canada, Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions (collectively "JCS") warrants that for a period of one year from the date of purchase, this product will be free from defects in material and workmanship. JCS, at its option, will repair or replace this product or any component of the product found to be defective during the warranty period. Replacement will be made with a new or remanufactured product or component. If the product is no longer available, replacement may be made with a similar product of equal or greater value. This is your exclusive warranty. Do NOT attempt to repair or adjust any electrical or mechanical functions on this product. Doing so will void this warranty. This warranty is valid for the original retail purchaser from the date of initial retail purchase and is not transferable. Keep the original sales receipt. Proof of purchase is required to obtain warranty performance. JCS dealers, service centers, or retail stores selling JCS products do not have the right to alter, modify or any way change the terms and conditions of this warranty.

This warranty does not cover normal wear of parts or damage resulting from any of the following: negligent use or misuse of the product, use on improper voltage or current, use contrary to the operating instructions, disassembly, repair or alteration by anyone other than JCS or an authorized JCS service center. Further, the warranty does not cover: Acts of God, such as fire, flood, hurricanes and tornadoes.

#### What are the limits on JCS's Liability?

JCS shall not be liable for any incidental or consequential damages caused by the breach of any express, implied or statutory warranty or condition.

Except to the extent prohibited by applicable law, any implied warranty or condition of merchantability or fitness for a particular purpose is limited in duration to the duration of the above warranty.

JCS disclaims all other warranties, conditions or representations, express, implied, statutory or otherwise.

JCS shall not be liable for any damages of any kind resulting from the purchase, use or misuse of, or inability to use the product including incidental, special, consequential or similar damages or loss of profits, or for any breach of contract, fundamental or otherwise, or for any claim brought against purchaser by any other party.

Some provinces, states or jurisdictions do not allow the exclusion or limitation of incidental or consequential damages or limitations on how long an implied warranty lasts, so the above limitations or exclusion may not apply to you.

This warranty gives you specific legal rights, and you may also have other rights that vary from province to province, state to state or jurisdiction to jurisdiction.

#### How to Obtain Warranty Service

##### In the U.S.A.

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-557-4825 and a convenient service center address will be provided to you.

##### In Canada

If you have any question regarding this warranty or would like to obtain warranty service, please call 1-800-557-4825 and a convenient service center address will be provided to you.

In the U.S.A., this warranty is offered by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions located in Boca Raton, Florida 33431. In Canada, this warranty is offered by Sunbeam Corporation (Canada) Limited doing business as Jarden Consumer Solutions, located at 20 B Hereford Street, Brampton, Ontario L6Y 0M1. If you have any other problem or claim in connection with this product, please write our Consumer Service Department.

**PLEASE DO NOT RETURN THIS PRODUCT TO ANY OF THESE ADDRESSES OR TO THE PLACE OF PURCHASE.**

© 2008 Sunbeam Products, Inc. doing business as Jarden Consumer Solutions. All rights reserved. Distributed by Sunbeam Products, Inc. doing business as Jarden Consumer Solutions, Boca Raton, Florida 33431.

[www.rivalproducts.com](http://www.rivalproducts.com)

Printed in China

SPR-121008



CKRVGRFM10

## Electric Griddle



## Owner's Guide

# READ AND SAVE THESE INSTRUCTIONS

PN. 132641

## IMPORTANT SAFEGUARDS

When using electrical appliances, basic safety precautions should always be followed, including the following:

1. Read all instructions before using.
2. Do not touch hot surfaces. Use HANDLES or KNOBS.
3. To protect against electrical shock, do not immerse TEMPERATURE CONTROL PROBE or CORD in water or other liquid.
4. This appliance is not for use by children.
5. Close supervision is necessary when any appliance is used near children.
6. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts, and before cleaning the appliance.
7. Do not operate any appliance with a damaged CORD or PLUG or after the appliance malfunctions or has been damaged in any manner.
8. The use of accessory attachments not recommended by Rival® may cause injuries.
9. Do not use outdoors.
10. Do not let CORD hang over edge of table or counter, or touch heated surfaces.
11. Do not place on or near a hot gas or electric burner, or in a heated oven.
12. Extreme caution must be used when moving an appliance containing hot oil or other hot liquids.
13. Always attach TEMPERATURE CONTROL PROBE to appliance first, then plug CORD into the wall outlet. To disconnect, turn TEMPERATURE CONTROL to OFF, then remove plug from wall outlet.

## SAVE THESE INSTRUCTIONS

This appliance is for **HOUSEHOLD USE ONLY**. No user-serviceable parts inside. Power unit never needs lubrication. Do not attempt to service this product. A short power supply cord is provided to reduce the hazards resulting from entanglement or tripping over a longer cord.

Do not use appliance for other than intended use.  
Use only Rival® model TK-1 TEMPERATURE CONTROL PROBE.

**AN EXTENSION CORD MAY BE USED WITH CARE; HOWEVER, THE MARKED ELECTRICAL RATING SHOULD BE AT LEAST AS GREAT AS THE ELECTRICAL RATING OF THE GRIDDLE.** The extension cord should not be allowed to drape over the counter or tabletop where it can be pulled on by children or tripped over.


**ELECTRIC POWER:** If electric circuit is overloaded with other appliances, Griddle may not operate properly. Griddle must be operated on a separate circuit from other operating appliances.

### POLARIZED PLUG



This appliance has a polarized plug (one blade is wider than the other). To reduce the risk of electric shock, this plug is intended to fit into a polarized outlet only one way. If the plug does not fit fully into the outlet, reverse the plug. If it still does not fit, contact a qualified electrician. Do not attempt to modify the plug in any way. If the plug fits loosely into the AC outlet or if the AC outlet feels warm do not use that outlet.

## KNOW YOUR ELECTRIC GRIDDLE

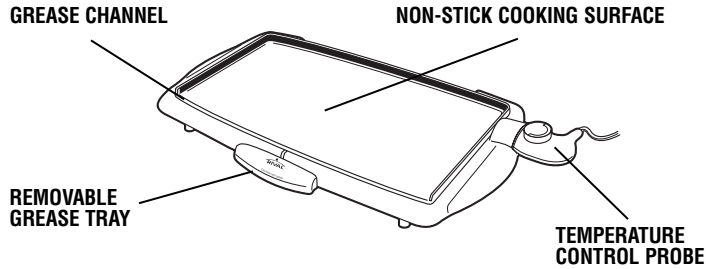

## HOW TO USE YOUR ELECTRIC GRIDDLE

1. Before use, wash the Griddle and GREASE TRAY, in warm soapy water, and dry completely.

**CAUTION:** Do not immerse TEMPERATURE CONTROL PROBE in water or other liquid.

2. Insert GREASE TRAY into the guides under the Griddle. Turn TEMPERATURE CONTROL PROBE to OFF and attach securely to the Griddle.

3. Condition the NON-STICK COOKING SURFACE with vegetable oil, wiping off any excess with a paper towel. Plug Griddle into 120 volt outlet. Preheat the Griddle by aligning the selected temperature setting on the TEMPERATURE CONTROL PROBE knob with the indicator light. Griddle is preheated when the light on the knob goes off. The light will cycle during use, indicating the selected temperature is being maintained.

4. When cooking is complete, turn TEMPERATURE CONTROL PROBE to OFF, unplug and allow unit to cool before cleaning.

**NOTE:** It may be necessary to scrape grease into the GREASE CHANNEL. Always use wood or nylon utensils to avoid scratching

## HOW TO USE YOUR ELECTRIC GRIDDLE

the NON-STICK COOKING SURFACE. When cooking consecutive batches of bacon or other high fat foods, it may be necessary to empty the GREASE TRAY to avoid grease overflowing onto the countertop.

**CAUTION:** Grease may be hot!

Some countertops are more sensitive to heat, use care not to place Griddle on surfaces where heat may cause damage. Griddle surfaces are hot during use. Allow to cool completely before handling or cleaning.

## COOKING TIME AND TEMPERATURE

FOOD	TEMP.*	TIME	DIRECTIONS
EGGS, fried	300° F	3 to 5 min.	<b>DO NOT PREHEAT.</b> Turn often.
BACON	350° F	8 to 14 min.	<b>DO NOT PREHEAT.</b> Turn often.
SAUSAGE	350° F	20 to 30 min.	Turn halfway into cooking time.
FRENCH TOAST	350° F	6 to 10 min.	Turn halfway into cooking time.
HAMBURGER	350° F	3 to 14 min.	Turn halfway into cooking time.
HAM SLICES	350° F	14 to 18 min.	Turn halfway into cooking time.
SANDWICHES	350° F	6 to 10 min.	Butter outside and brown both sides.
PORK CHOPS	350° F	20 to 30 min.	Brown both sides, reduce temp. to 250° F. Turn halfway into cooking time.
POTATOES	350° F	10 to 12 min.	Turn halfway into cooking time.
<b>STEAKS</b>			
Rare	400° F	4 to 6 min.	Turn halfway into cooking time.
Medium	400° F	7 to 12 min.	Turn halfway into cooking time.
Well Done	400° F	13 to 18 min.	Turn halfway into cooking time.
PANCAKES	350° F	2 to 6 min.	Pour batter onto griddle. When bubbles appear on top, turn.

\*Unless otherwise noted, preheat griddle

## HOW TO CLEAN YOUR ELECTRIC GRIDDLE

1. Unplug and allow to cool before cleaning.
2. Remove TEMPERATURE CONTROL PROBE (**DO NOT IMMERSE IN WATER**). Wipe with damp cloth and dry thoroughly.
3. Remove GREASE TRAY and discard contents. With TEMPERATURE CONTROL PROBE removed, the Griddle is completely immersible. The Griddle (with TEMPERATURE CONTROL PROBE removed) and GREASE TRAY may be washed in the dishwasher. Or you may wash the Griddle and GREASE TRAY with hot soapy water. Rinse, and dry thoroughly.

**CAUTION:** TEMPERATURE CONTROL PROBE and PROBE CONNECTION must always be completely dry before use.

## CARE OF YOUR ELECTRIC GRIDDLE

- Use only nylon, plastic, or wood utensils with care to avoid scratching the NON-STICK COOKING SURFACE. Never cut food on the Griddle.
- Remove stubborn stains with plastic scouring pad and mild dishwashing liquid.

**CAUTION: DO NOT USE STEEL WOOL.**

**ANY SERVICE REQUIRING DISASSEMBLY OTHER THAN THE ABOVE CLEANING MUST BE PERFORMED BY AN AUTHORIZED RIVAL® SERVICE CENTER.**

**Questions?** Please call 800-557-4825 or visit us at [www.rivalproducts.com](http://www.rivalproducts.com)

## NOTES